

2-Wire System Accessories, connecting solenoid valves and other system devices to the 2-Wire System.



The Acclima 16 and 32-zone adapters are used to connect 24 volt ac valves and relays to the Acclima 2 wire system. They are designed to be installed above ground either indoors or outdoors. The adapters are wired to the Acclima CS3500 controller through the Acclima 2-wire system. The 16 or 32 terminals in the adapter boxes can accommodate connections to either 16 or 32 solenoid valves. These adapters are normally used in retrofit installations where the zone wiring is already in place.

16-32 Zone Adapters are best used to retrofit new systems only. For installing new systems to the Acclima 2-Wire system use 2 or 4 zone adapters.

Model#:

ACC-ADP-016

ACC-ADP-032

Features:

- Durable, weather resistant, cabinet for outdoor installation
- Retrofit design, replaces existing controller and communicates with new Acclima controllers over the 2-Wire system
- Easy installation
- LEDs report active valves
- LEDs report communication activity over the 2-Wire system

Specifications:

- 24 vac, 20 ma rms, .48 watts
- Operating Temperature Range: -20C to 70C
- Survival Temperature Range: -40C to 85C

Acclima
Closed Loop Irrigation Systems

