


Acclima DataSnap Firmware Upgrade

Upgrade Procedure:

1. Download the latest DataSnap firmware file to your computer. The latest firmware can be obtained from the Acclima website: <http://acclima.com/products#DataSnap>
 - a. (The firmware file will be named starting with “ACFW”)
2. Locate the file and copy it to “C:\Acclima\SnapView\firmware” (or wherever you have installed the SnapView software if different from this default setting)
3. Open the SnapView software
4. Click the **Tools** menu bar at the top and find **Upgrade Firmware** and click it
5. Click the **Select Firmware** button and browse to the location of the firmware file and select it
6. Ensure the checkbox next to the correct DataSnap is checked and click **Begin Upgrade**
7. Do not disturb the DataSnap USB cable or computer while the firmware is uploaded and applied to the DataSnap

Note: During the upgrade process, you may get an error message that it has lost connection to the DataSnap; this is normal for older versions of firmware – simply close the SnapView software, unplug and replug the USB cable into the DataSnap and reopen SnapView. As you inspect the firmware version of the DataSnap you should notice that it is now the current version.

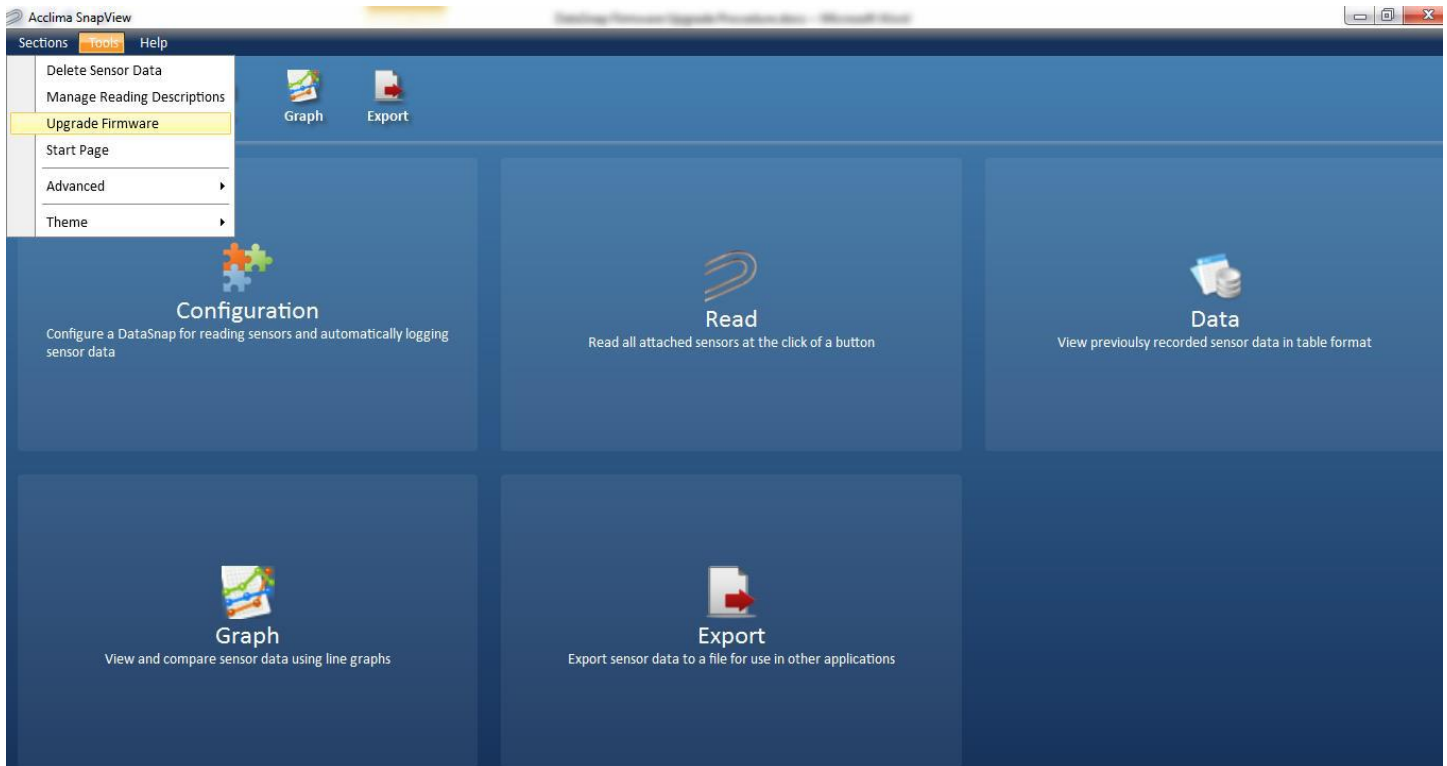



DataSnap Firmware Upgrade

Upgrade the feature set and functionality in the DataSnap

1

Select Firmware File

Firmware File	C:\Acclima\SnapView\firmware\ACFW_19_2_1_3.waf
Upgrade Version	2.1.3
Product	DataSnap
Date Created	6/23/2017 2:29:00 PM
File Length	62412 Bytes

2 Select the DataSnaps to upgrade

Unnamed DataSnap (v2.1.2)

Begin Upgrade